


BC415-2

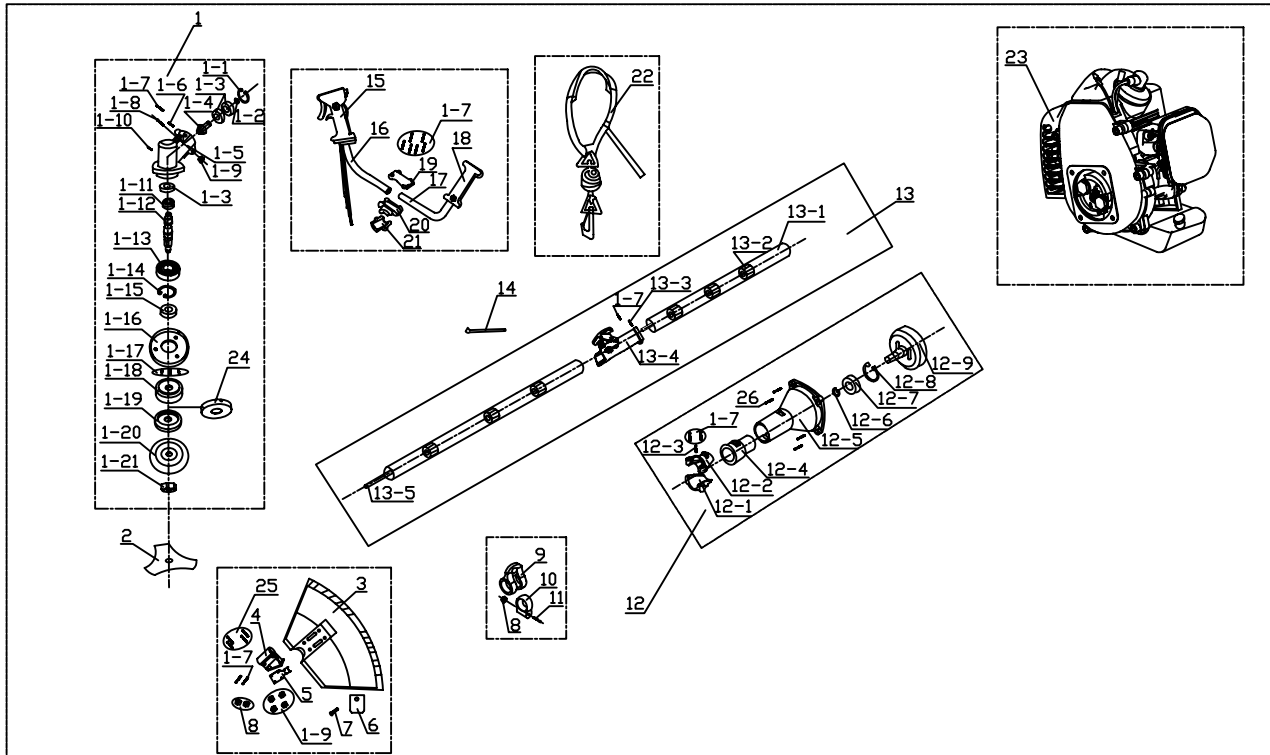

No.	parts description	number	No.	parts description	number
1	gearbox assembly	1	11	bolt M5X20	1
1-1	inner clip ϕ 26	1	12	output assy	1
1-2	outer clip ϕ 10	1	12-1	aluminium board II	1
1-3	bearing 6000	3	12-2	aluminium board II	1
1-4	driving gearwheel	1	12-3	bolt M5X12	1
1-5	gearwheel block	1	12-4	suspension cushion	1
1-6	bolt M6X18	1	12-5	output	1
1-7	bolt M5X25	12	12-6	outer clip ϕ 15	1
1-8	bolt M5X35	1	12-7	bearing 6202	1
1-9	nut M5	5	12-8	inner clip ϕ 35	1
1-10	bolt M6X12	1	12-9	clutch plate	1
1-11	gearwheel	1	13	trasmission rod	1
1-12	shaft	1	13-1	aluminium pipe	2
1-13	bearing 6002	1	13-2	bearing	6
1-14	inner clip ϕ 32	1	13-3	bolt M5X16	1
1-15	oil seal ϕ 20X ϕ 32X6	1	13-4	Connect set assembly	1
1-16	pretector cover	1	13-5	trasmission shaft	2
1-17	bolt M5X10	3	14	line	3
1-18	shaft seat	1	15	throttle switch assy	1
1-19	press board	1	16	right pipe	1
1-20	pretector cover	1	17	left pipe	1
1-21	nut M10X1.25	1	18	left handlebar	1
2	blade	1	19	fix seat I	1
3	pretector assy	1	20	fix seat II	1
4	fix seat	1	21	fix seat III	1
5	connect plate	1	22	belt assy	1
6	small blade	1	23	engine assembly	1
7	bolt st4X16	1	24	protection cover	1
8	nut M5	3	25	bolt M5X20	4
9	hanger link assy	1	26	bolt M6X20	4
10	orientation ring	1			